


PUSH TO LOCK - HOSE ASSEMBLY TOOL
PUSH TO LOCK - SCHLAUCH-MONTAGEWERKZEUG

SERIE HTA 10-13-PNM

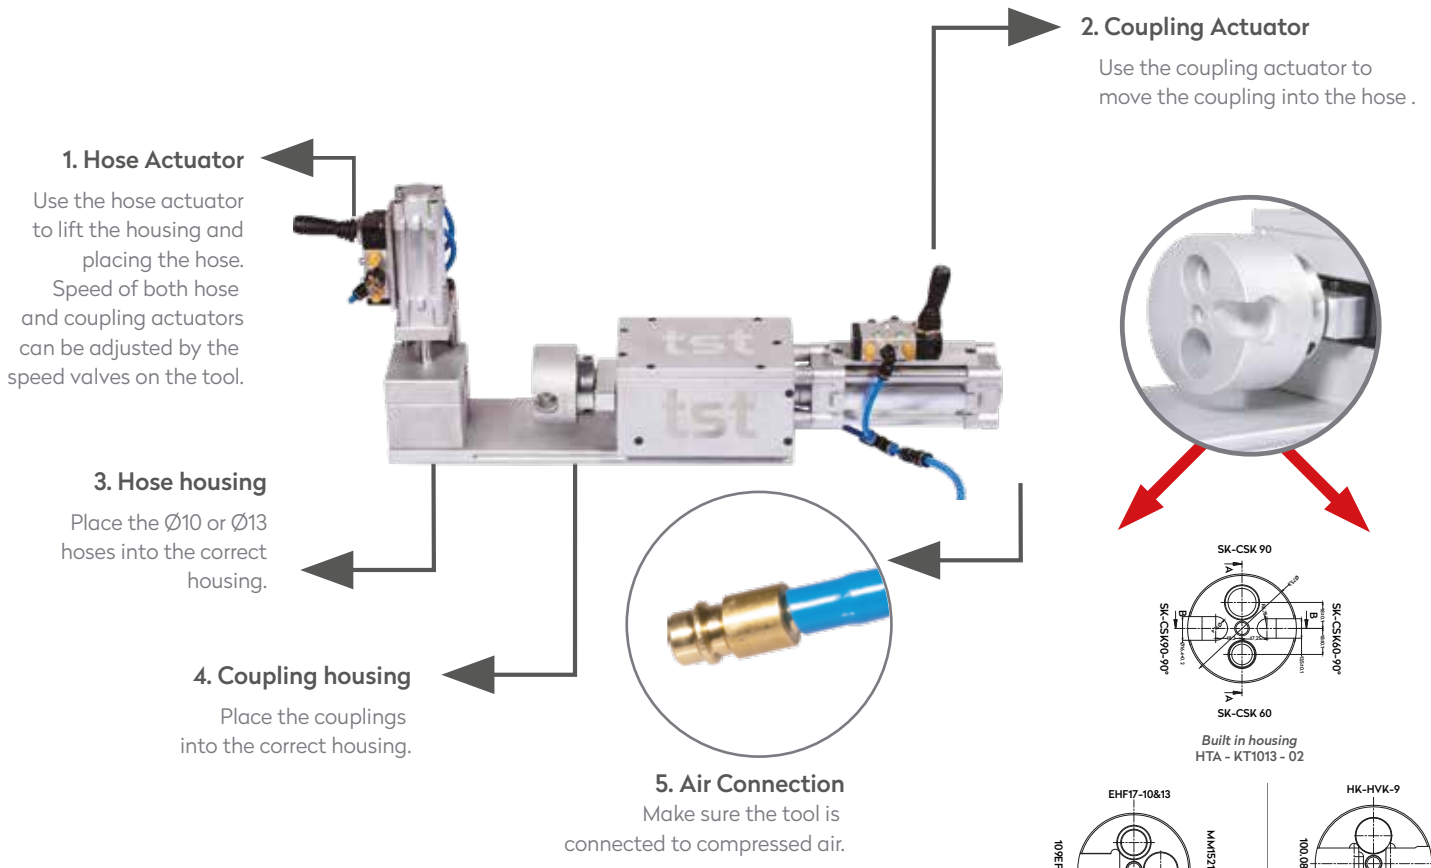

HOW IT WORKS



1 Press the hose actuator to lift the groove. Place the hose into the groove and press again to clamp it automatically.

Suitable Ø10 hoses for the application are: PLOK10 - PDLOK10 - WHMLOK10 - WHMDLOK10 and Ø12 hoses are: PLOK12 - PDLOK12 - WHMLOK12 - WHMDLOK12




2 Make sure the hose inlet is max 3 cm away from the housing in order to keep the hose inlet stable and ready for assembly.

The hose inlet can either be perfectly aligned with the housing or max 3 cm away from the housing for an easier assembly of couplings.



3 Place the coupling into the suitable coupling housing and make sure the accurate housing is installed on the tool. If not, please replace the housing with the other housing which you will find in the box.

The housing kit can either be for SK-CSK90, SK-CSK60-90, SK-CSK90-90, 100.08 or HK-HVK9-90, HK-HVK9,100.08-90 type of couplings. EHF type of adaptors are also suitable for usage.

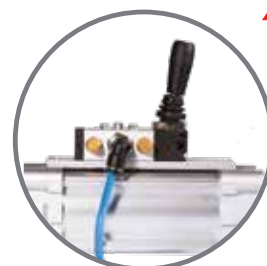

4 Press the coupling actuator to move the coupling into the hose automatically.

After the connection is provided, press again to proceed with the cycle.